


Mars standard advantages for more stringent Healthcare applications.

- Standard clay back coating minimise particle release
- Smooth non-perforated face is easily washed clean for maintenance. Achieves FDA standards of smooth, durable and easily cleanable
- Safe for use with common disinfectants #
- Patented basemat USG X-Technology incorporating latex binders resists moisture and often subsequent staining of wet-formed mineral fibre which can contribute to mould, mildew and bacterial growth
- All Mars *ClimaPlus* products are produced with a patented broad spectrum anti-microbial treatment as standard to face and back surfaces – they do not require additional specialist additives
- Guaranteed resistance against mould, mildew and bacteria, including minimum:

To AATCC 147	To ASTM D3273
○ ATCC 6538 <i>Staphylococcus aureus</i>	○ ATCC 6275 <i>Aspergillus nige</i>
○ ATCC 4352 <i>Klebsiella pneumonia</i>	○ ATCC 9849 <i>Penicillium citrinum</i>
	○ ATCC 9348 <i>Aureobasidium pullulans</i>
- Meets USDA/FSIS guidelines for use in food processing areas
- ASTM D2486 – Exceeds 1000+ scrub cycles without surface break or the extent of abrasion
- ASTM D4828 – Exceeds 1000+ wash cycles without surface break or the extent of abrasion
- 1200 x 600 square edge is standard to provide a large and smooth a ceiling plane with a good seal as possible in exposed grid, and to minimise edge exposure. Clipping will assist creating an even tighter seal, required for positive air pressure applications. Rebated SLT edge and 600 x 600 sizes also available.
- 19mm thick for :
 - high sound absorption performance with NRC 0.70 to reduce noise in areas with hard walls, floor and other surfaces
 - good attenuation performance of CAC 39 to help block sound to other areas
 - extra robustness for cleaning and maintenance
- **USG ClimaPlus™ 30-year lifetime system warranty against visible sag, bacteria, mould and mildew**

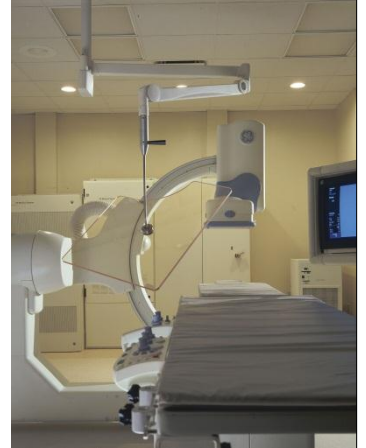

Healthcare markets

Typical Applications

- Healthcare facilities (non-surgical areas)
 - Hospitals
 - Patient rooms
 - Treatment rooms
 - Nurses stations
 - Emergency rooms
 - Corridors
 - Toilets
 - Medical Centres
 - Doctor's consultation rooms
 - Dentists
- Food prep areas

Typical Applications

- Electronic production and assembly
- Pharmaceutical
- General labs
- Recording equipment rooms

Cleaning recommendations

Use a clean white cloth with water or a mild detergent and wipe surface (Wipe detergent off if used.) To disinfect, lightly spray surface and wipe clean with a white cloth. Acceptable colourless disinfectants include:

Hydrogen peroxide	Isopropyl alcohol
Quaternary ammonium	Sodium hypochlorite

